



Elevate Comfort, Save Energy
Neo Wave Smart Thermostats

neowave.tech

#### TRM-001 Fan Coil Thermostat

#### Product Features:



01 LCD integrated screendisplay




02 Oval soft Shape design



03 Pc Flame ratardan high Transparency Panel

# Wiring Diagram:

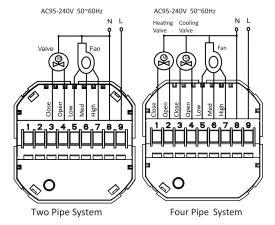

#### **Installation Steps:**



Turn Off The Main Power Supply
 Unscrew The Installation Panel By
 Twisting The Display Frame





- 3. Refer to the wiring diagram and Fig3, And connect the TRMk cover circuit of the product.
- 4. Fix the installation panel with the 60mm european-style cassette with screws and embed it into the wall.



- 5. Rotate the display section TRMk to the mounting panel.
- 6. Installation is Completed.




#### Smart Home First Choice:

Simple black and white design Understated Luxury.

Unique UI Design Interface. All-in-one Window. Negative Black Screen.





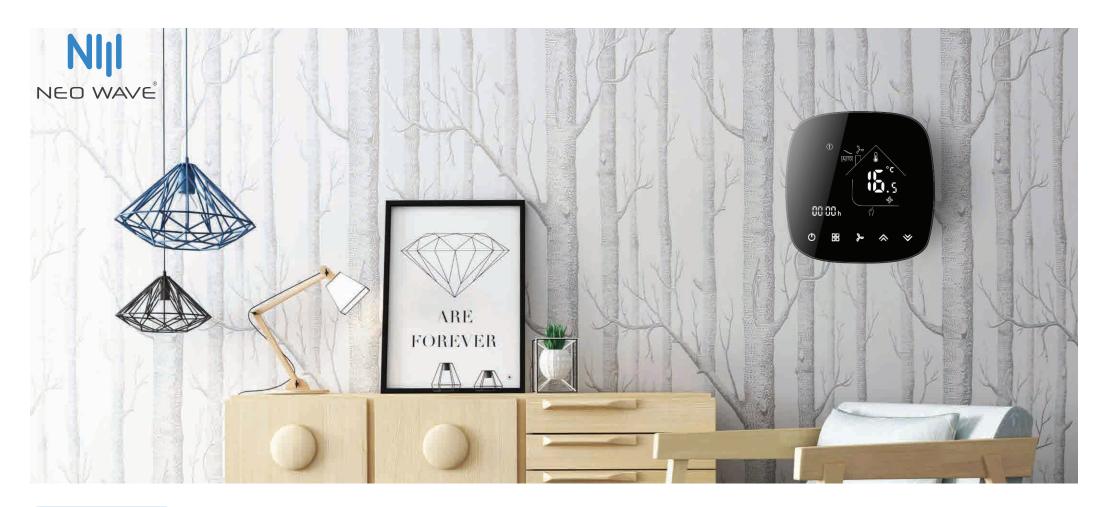

# TRM-001 Fan Coil Thermostat series selection table

			Power	Supply	Con	trol		Fan				App	plication						-	Additional					Co	olor	
N	0	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired	3 wired	0-1 0V	0-1 0V	Modbus	WIFI	Zigbee	Keycard	Window	Programm	External	Battery	White	Black	Brushe	Other
												Motorized	Motorized	Motorized	Damper						able	Sensor				dSS	
												Valve	Valve	Valve													
1		TRM-001 AL	√	√	√	√		√		✓		√	√								√		Optional		✓		
2	2	TRM-001 ALN	√	√	√	√		√		√		-√	√			1									√		
3	3	TRM-001 ALW	√	-√	√	√		√		√		√	√				-√				√				√		
4	1	TRM-001 ALZB	√	√	√	√		√		√		-√	-√					√			1				√		
5	,	TRM-001 EL	√	√	√	√		√			√	-√	√								√		Optional		√		
6	•	TRM-001 ELN	√	√	√	√		√			√	-√	√			√					√				√		
7	1	TRM-001 ELW	√	-√	√	√		√			√	√	√				√				√				√		
8	3	TRM-001 ELZB	√	√	√	√		√			√	-√	-√					√			1				√		
9	•	TRM-001 M L	√	√	√	√		√		√				√							√		Optional		√		
10	0	TRM-001 M LN	√	-√	√	√		√		√				√		√									√		
1	1 1	TRM-001 M LW	√	-√	√	√		√		-√				√			√				√				√		

#### TRM-002 Fan Coil Thermostat

#### Product Features:



UI LCD Integrated Screen Display.




02 Oval Soft Shape Design




03
Pc Flame ratardant high
Transparency Panel

# Wiring Diagram:

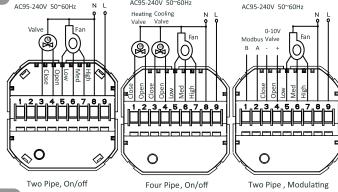

#### Installation Steps:

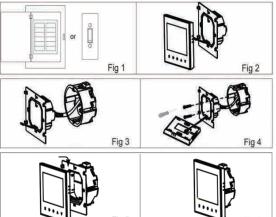

- l. After correctly connecting the power supply and equipment cables to the terminals of the power supply box use a screwdriver to pass the screws through the mounting steel plate and fix them on the cassette.
- 2. After the power bcx is fixed connect the cable to the operation panel.
- 3. Put the operation panel against the installation steel plate and slide it down.
- 4. Installation is complete.



# Define a new mode of intelligent temperature control

Concave and convex panel design rejects old-fashioned monotony.

Blue round switch button, Smart and extraordinary.

No. 1 In B2C Sales, Best-selling in europe and united States.
WIFI/MODBUS Optional.







TRM-002 Fan Coil Thermostat series selection table

		Power	Supply	Con	trol		Fan				App	plication					Α	dditional					C	Color	
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve		WIFI	Zigbee	Keycard	Window	Programm able	External Sensor	Battery	White		Black Outside	White Outside
1	TRM-002 AL	√	√	√	√		√		√		√	√							√		Optional	√	-√	√	√
2	TRM-002 AL N	√	√	√	√		√		√		√	√		√								√	-√	1	√
3	TRM-002 AL K	√	√	√	√		-√		√		√	√					1		1		Optional	-√	-√	-√	√
4	TRM-002 AL NE	√	√	√	√		√		√		√	√		√						√		√	√	-√	√
5	TRM-002 AL W	√	√	√	√		√		√		√	√			√				√			√	-√	-√	√
6	TRM-002 AL ZB	√	√	√	√		√		√		√	√				-√			√			√	✓	-√	√
7	TRM-002 EL	√	√	-√	√		-√			√	√	√							√		Optional	√	√	-√	√
8	TRM-002 EL N	√	√	√	√		-√			√	√	√		√								√	-√	√	√
9	TRM-002 EL NK	-√	√	<b>√</b>	✓		√			√	<b>√</b>	√		√			√					√	√	<b>√</b>	√
10	TRM-002 EL W	√	√	-√	√		-√			√	√	√			√				√			√	√	√	√
11	TRM-002 EL ZB	√	√	√	√		√			√	√	√				<b>√</b>			<b>√</b>			√	-√	√	√
12	TRM-002 EL NE	√	√	√	√		-√			√	√	√		√						√		√	-√	√	√
13	TRM-002 M L	√	√	√	√		-√		√				1						√		Optional	√	√	1	√
14	TRM-002 M L N	√	√	√	√		-√		√				√	√								√	√	√	1
15	TRM-002 M L W	√	√	√	✓		-√		√				√		√				√			√	√	√	-√
16	TRM-002M L -Fan	√	√	√	√		√	√	√		√	√							<b>√</b>		Optional	√	√	√	√

#### TRM-002 Fan Coil Thermostat

#### Product Features:



Borderless Tempered Glass Panel.




02 LED Color Display.





03
Sensitive Capacitive
Touch Buttons.


#### Wiring Diagram:

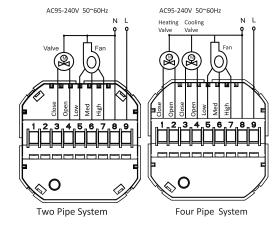


#### Installation Steps:

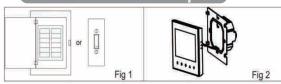

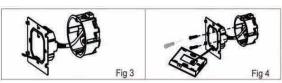

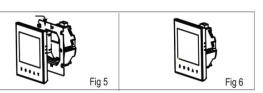

- After correctly connecting the power supply and equipment cables to the terminals of the power supply box use a screwdriver to pass the screws through the mounting steel plate and fix them on the cassette.
- 2. After the power bcx is fixed connect the cable to the operation panel.
- 3. Put the operation panel against the installation steel plate and slide it down.
- 4. Installation is complete.

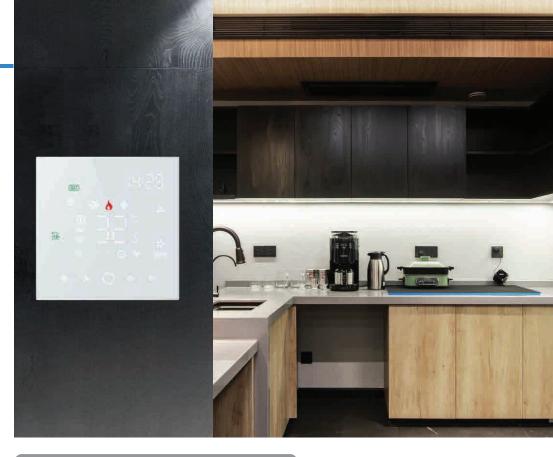

#### Elegance in the details

Pure black / pure white classic appearance color matching rejects old-fashioned Monotony

Temered glass panel leaves no scratches, easy to clean.

Wall visible thickness 12mm.

Support ODM/OEM Function customization.







TRM-003

Fan Coil Thermostat series selection table

		Power Supply Contro						Fan				Ар	plication						Additio	onal				Colo	r
No	0	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired	3 wired	0-1 0V	0-1 0V	Modbus	WIFI	Keycard	Window	Programm	External	Battery	White	Black	Other
														Motorized	Damper					able	Sensor				
												Valve	Valve	Valve											
1	1	TRM-003 A	<b>√</b>	√	<b>√</b>	<b>√</b>		-√		<b>√</b>		<b>√</b>	-√							<b>√</b>		Optional	<b>√</b>	✓	Pending
2	Т	RM-003 AN	√	-√	√	√		√		√		√	√			√							<b>√</b>	-√	Pending
3	П	RM-003 AW	√	√	√	-√		√		√		√	√				√			√			<b>√</b>	-√	Pending
4	1	TRM-003 E	√	√	√	√		-√			√	√	√							-√		Optional	<b>√</b>	-√	Pending
5	Т	RM-003 EN	√	√	√	√		√			√	√	√			√							-√	-√	Pending
6	П	RM-003 EW	√	√	√	√		√			√	√	√				<b>√</b>			√			√	-√	Pending
7	Т	TRM-003 M	√	√	√	<b>√</b>		√		√				1						√		Optional	√	√	Pending
8	Т	TRM-003 M N	<b>√</b>	-√	√	<b>√</b>		√		√				√		√							<b>√</b>	√	Pending
9	TR	RM-003 M W	√	-√	<b>√</b>	<b>√</b>		√		-√				√			<b>√</b>			√			√	√	Pending

#### TRM-005 Fan Coil Thermostat

#### Product Features:











02 LED Colorful Display.


03 2.5D invisivble border window


#### Wiring Diagram:

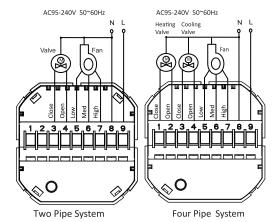

#### **Installation Steps:**

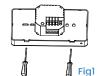


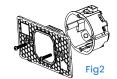

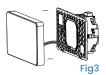



- 1. Use a screwdriver to pry open the mounting plate along the buckle position.
- After Prying open, connect the cable to the screen and the power box without removing the cable.
- 2. Make sure that the wire are without electricity, connect the thermostat with the wires according to the wiring diagram, and then fix the mounting plate on the cassette with.
- 3. Snap the thermostat screen and the mounting plate together to complete the installation. Power on for testing.
- 4. Installation is completed.

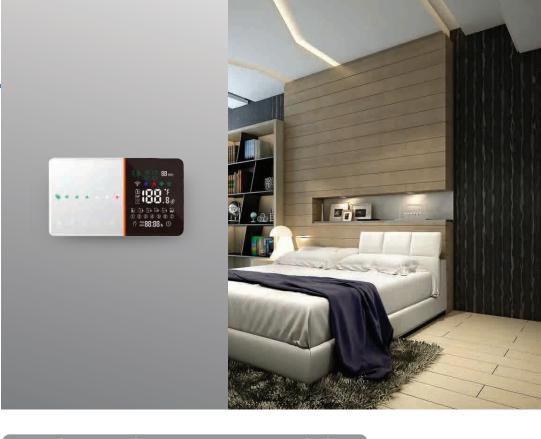

#### Fashion horizontal screen sliding temperature control


Feel the warmth and touch life.
Black + White acrylic panel, easy to clean, flame resistant.

Wall visible thickness 13.6mm

Cooling/heating/ventilation/energy saving.

Multi-mode selection.

Manual/automatic operation mode can be switched arbitrarily.

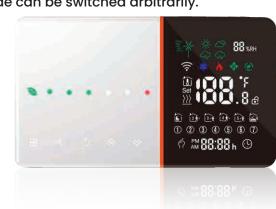



Fan Coil Thermostat series selection table

		Power Supply Control Fan									Ap	plication					Additio	nal				Colo	r
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe		2 wired Motorized		0-1 0V Motorized		WIFI	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Other
	TD14 005 4	,	,	√	,		,		,		Valve	Valve	Valve					,		0 1	,		D !!
-	TRM-005 A	٧	٧	٧.	1		٧		٧,		٧	٧						- ✓		Optional	٧		Pending
2	TRM-005 AN	٧	٧	٧	√		٧		٧		<b>√</b>	٧		<b>V</b>							٧		Pending
3	TRM-005 AW	√	√	√	√		1		-√		- √	1			✓			√			√		Pending
4	TRM-005 E	-√	1	-√	√		1			-√	-√	- √						-√		Optional	-√	-√	Pending
5	TRM-005 EN	<b>√</b>	√	√	√		√			<b>√</b>	√	√		- √							-√	<b>√</b>	Pending
6	TRM-005 EW	<b>√</b>	√	<b>√</b>	<b>√</b>		-√			<b>√</b>	√	√			<b>√</b>			<b>√</b>			<b>√</b>	<b>√</b>	Pending
7	TRM-005 M	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		√		<b>√</b>				√					<b>√</b>		Optional	<b>√</b>	<b>√</b>	Pending
8	TRM-005 M N	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		√		<b>√</b>				√	<b>√</b>							<b>√</b>	<b>√</b>	Pending
9	TRM-005 M W	<b>√</b>	√	<b>√</b>	<b>√</b>		1		<b>√</b>				1		-√			√			√	√	Pending

#### TRM-006 Fan Coil Thermostat

#### Product Features:



Borderless Rounded Acrylic Panel.




LED Four-Color Digital Display.




03
Patented Disassembly
And Installation.

#### Wiring Diagram:

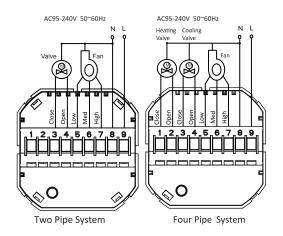

#### Installation Steps:

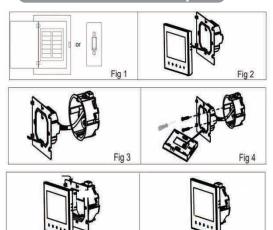

- 1. Keep power off.
- 2. Push the LCD assembly up and down to remove the mounting plate.
- 3. Connect power supply, load into the appropriate terminals. "See FIG3".
- 4. Fix the mounting plate into the wall with screws in the box.
- 5. Fasten body of thermostat and the mounting plate through rotating.
- 6. Installation is completed



#### Enjoy the freedom of vision

Simple White + elegant black two-color modeling light luxury style.

Frameless hardened Acrylic Multicolor lenses. Thin and light with a thickness of 11.9,,

Suitable for temperature control such as central air conditinoner/fan coil unit.

Widely used for intelligent temperature control in home/office environment.







Fan Coil Thermostat series selection table

		Power	Supply	Con	trol		Fan				Арр	olication						Additio	onal				Colo	r
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired	3 wired	0-1 0V	0-1 0V	Modbus	WIFI	Keycard	Window	Programm	External	Battery	White	Black	Other
											Motorized	Motorized	Motorized	Damper					able	Sensor				
											Valve	Valve	Valve											
1	TRM-006 AW	<b>√</b>	√	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	<b>√</b>				✓			√			<b>√</b>	✓	Pending
2	TRM-006 EW	√	√	1	√		<b>√</b>			<b>√</b>	<b>√</b>	√				<b>√</b>			√			√	√	Pending
3	TRM-006 M	<b>√</b>	<b>√</b>	√	<b>√</b>			√	<b>√</b>				<b>√</b>						<b>√</b>		Optional	√	√	Pending

#### TRM-007 Fan Coil Thermostat

#### Product Features:








01
Full Screen Small
Rounded Acrylics Lens.

Engineering Quality
Super Cost-Effective.


03

Patented Disassembly And Installation.

#### Wiring Diagram:

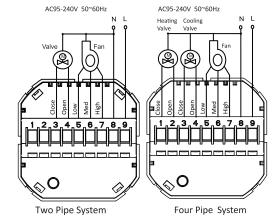

# **Installation Steps:**

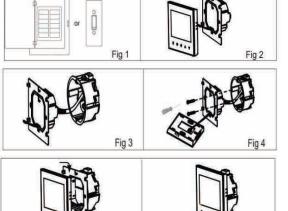

- 1. Keep power off.
- Push the LCD assembly up and down to remove the mounting plate.
- 3. Connect power supply, load into the approprite terminals.
- Fix the mounting plate into the wall with screws in the box.
- 5. Fasten body of thermostat and the mounting plate through rotating.
- 6. Installation is completed.



# Designed for lightweight home systems:

#### Bring you a high-quality temperature control experience.


Full Screen LED Multi-Color Digital Display. Simple UI Interactive Interface.

Engineering Control Mode That Removes Unnecessary Cumbersome Funcitons. Built-in Memory Storage, Even If the Power Is Suddenly Turned Off,

The Set Data Will Not Be Lost.





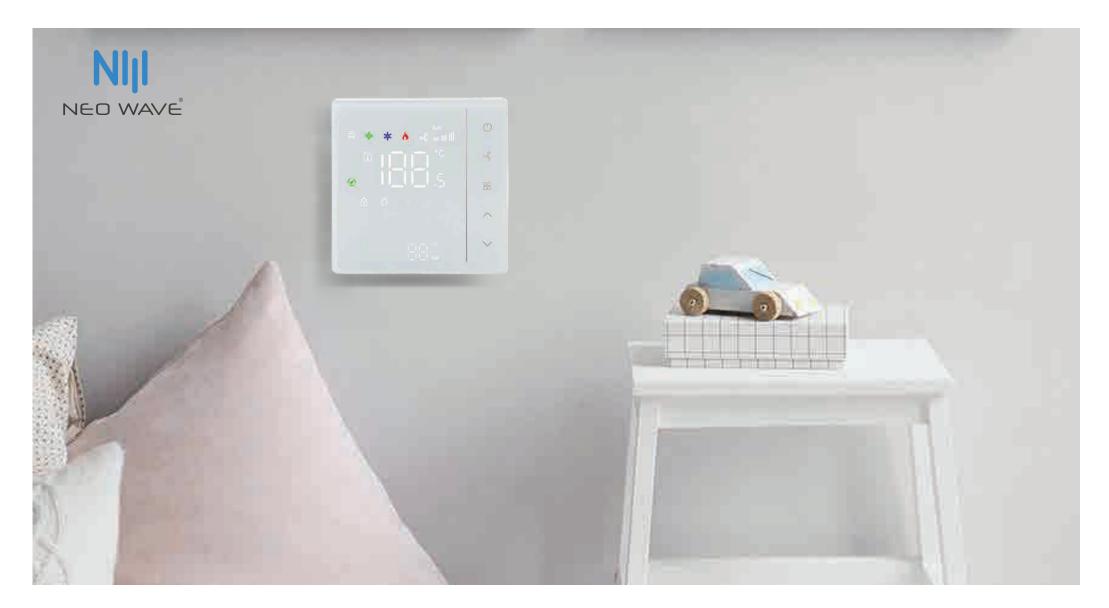

Fan Coil Thermostat series selection table

		Power	Supply	Cor	itrol		Fan				Ар	plication						Additio	onal				Colo	r
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired	3 wired	0-1 0V	0-1 0V	Modbus	WIFI	Keycard	Window	Programm	External	Battery	White	Black	Other
											Motorized	Motorized	Motorized	Damper					able	Sensor				
											Valve	Valve	Valve											
1	TRM-007 A	- √	√	√	<b>√</b>		√		<b>√</b>		<b>√</b>	<b>√</b>							<b>√</b>		Optional	√	√	Pending
2	TRM-007 E	√	√	1	√		√			<b>√</b>	√	<b>√</b>							<b>√</b>		Optional	√	1	Pending

#### TRM-6001 Fan Coil Thermostat

#### Product Features:








02 LED No Window Acrylic Lens.





03
Patented Disassembly
Convenient Installation.

#### Wiring Diagram:

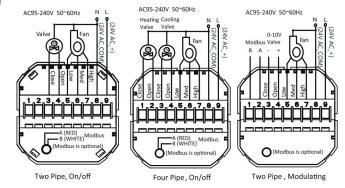

#### Installation Steps:

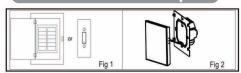

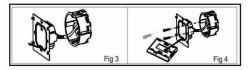




- 1. Keep power off
- 2. Remove the mounting plate by pushing the LED assembly.
- 3. Connect the power supply and load it into the appopriate terminals "See FIG3".
- 4. Securely fix the mounting plate to the wall with screws.
- 5. Fasten body of thermostat and the mounting plate through rotating "See FIG5".
- 6. Installation is completed.



## Enjoy High Intellectual Life

The Highly Integrated Chips Brings Your a More Stable Temperature Control Experience, Wich Is The Ideal Choice For Your Home Teperature Control.



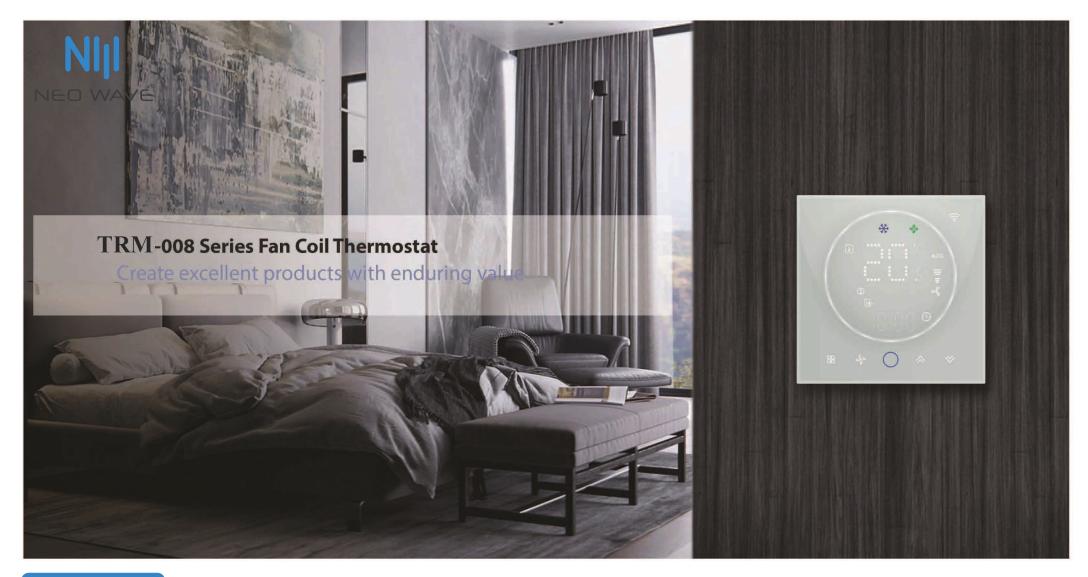

Fan Coil Thermostat series selection table

		Power	Power Supply Control Fan								Ар	plication						Additi	onal				Colo	r
No	Model	220VAC	OVAC 24VAC Heat Cool 1 Speed 3 Speed 0-1 0							4-pipe	2 wired	3 wired	0-1 0V	0-1 0V	Modbus	WIFI	Keycard	Window	Programm	External	Battery	White	Black	Other
													Motorized	Damper					able	Sensor				
											Valve	Valve	Valve											
1	TRM-009 A	√	<b>√</b>	<b>√</b>	<b>√</b>		√		√		<b>√</b>	<b>√</b>							√		Optional	<b>√</b>	√	Pending
2	TRM-009 AW	√	-√	-√	√		√		-√		√	√				√			√			<b>√</b>	√	Pending
3	TRM-009 E	√	-√	√	<b>√</b>		√			√	-√	-√							√		Optional	√	√	Pending
4	TRM-009 EW	√	<b>√</b>	√	√		√			√	√	1				√			√			<b>√</b>	√	Pending

#### TRM-009 KONB FCU THERMOSTAT

#### Product Features:









01 Black + White.


02 03
Knob Color Light Effect. Pate

Patent Appearance.


# Wiring Diagram:

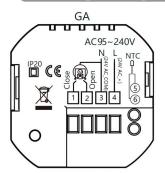

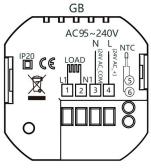


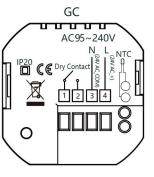

#### Installation Steps:

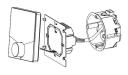

Turn off the main power supply before installation, and separate the installation panel by sliding the display frame. Connect the line of the back cover of the uct by referring to the wiring diagram and the

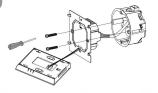


2, use screws to install the panel with 60mm European cartridges Fixed, embedded in the wall;



4. The installation is complete.



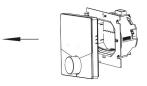

Install the display part back to the installation pa





# Rotary Temperature Control Lights Up The Beauty

Three-Dimensional Appearance With Dazzling Color Equivalent, Carefully Embellish Your Life







(Other colors can be customized)



Fan Coil Thermostat series Selection table

		Power	Supply	Con	trol		Fan				Ар	plication					Additi	onal				Colo	r
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe			Motorized	Motorized		WIFI	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Other
											Valve	Valve	Valve										
1	TRM-009 A	<b>√</b>	<b>√</b>	✓	✓		<b>√</b>		<b>√</b>		√	√						√		Optional	√	√	Pending
3	TRM-009 AW	√	<b>√</b>	√	<b>√</b>		<b>√</b>		1		√	√			√			1			√	√	Pending
4	TRM-009 E	- √	√	√	√		<b>√</b>			√	√	√						√		Optional	√	√	Pending
6	TRM-009 EW	<b>√</b>	<b>√</b>	<b>√</b>	√		<b>√</b>			√	√	√			<b>√</b>			√			1	<b>√</b>	Pending

#### TRM-008 Fan Coil Thermostat

# Product Features:








02 LCD Blue Negative Display




03 Matte Silver Border

#### Wiring Diagram:

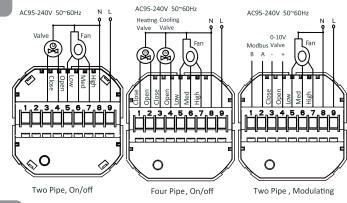

#### **Installation Steps:**

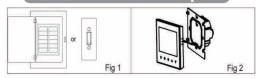





- After correctly connecting the power supply and equipment cables to the terminals of the power supply box, use a screwdriver to pass the screws through the mounting steel plate and fix them on the cassette.
- 2. After the power ox is fixed connect the cable to the operation panel.
- 3. Put the operation panel against the installation steel plate and slide it down.
- 4. Installation is completed.



# Minimalist Look

#### Wisdom is extraodinary

Push-ip Installation, bid farewell to the eraof tools. Flush Mount Design.

Clearly Visible Thinness That Blends into a Variety Of Home Styles. Support ODM/OEM Function Customization.







TRM-1000 Fan Coil Thermostat series selection table

		Power	Supply	Cor	itrol		Fan				Ap	plication						- 1	Additional						Color			Butto	n light
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve	0-1 0V Damper	Modbus	WIFI	Zigbee	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Pink	Gold	Silver	One	Four
1	TRM-1000 AL	٧.	V	٧	٧		٧		٧		<b>V</b>	<b>V</b>								<b>V</b>		Optional	٧	<b>V</b>	<b>V</b>	٧	٧	٧	
2	TRM-1000 AL N	<b>V</b>	<b>V</b>	V	<b>V</b>		<b>V</b>		<b>V</b>		<b>V</b>	<b>V</b>			<b>V</b>								<b>V</b>	<b>V</b>	<b>V</b>	<b>V</b>	V		
3	TRM-1000 AL K	<b>V</b>	<b>√</b>	V	<b>V</b>		<b>√</b>		<b>V</b>		<b>√</b>	<b>V</b>						<b>√</b>		<b>V</b>		Optional	<b>V</b>	<b>V</b>	<b>√</b>	<b>V</b>	<b>V</b>		
4	TRM-1 000AL N K	V	V	V	V		√		<b>V</b>		<b>V</b>	<b>V</b>			<b>√</b>			<b>V</b>					<b>V</b>	<b>V</b>	V	<b>√</b>	V		
5	TRM-1 000AL N W2	V	V	V	V		√		<b>√</b>		<b>V</b>	<b>V</b>			√				<b>V</b>				<b>V</b>	<b>V</b>	V	<b>√</b>	√		
6	TRM-1 000AL N E	<b>V</b>	V	V	V		√		<b>V</b>		<b>V</b>	<b>V</b>			<b>√</b>						√.		<b>V</b>	<b>V</b>	<b>√</b>	<b>√</b>	V		
7	TRM-1 000AL E	<b>V</b>	<b>V</b>	V	V		<b>V</b>		<b>V</b>		<b>V</b>	<b>V</b>								√	<b>V</b>	Optional	<b>V</b>	<b>V</b>	V	<b>√</b>	<b>V</b>		
8	TRM-1 000AL W	<b>V</b>	<b>V</b>	V	V		√.		<b>V</b>		<b>V</b>	<b>V</b>				V				√			<b>V</b>	<b>√</b>	V	<b>√</b>	V		
9	TRM-1 000EL	<b>V</b>	<b>√</b>	<b>V</b>	V		<b>V</b>			<b>V</b>	<b>V</b>	<b>V</b>								√		Optional	<b>V</b>	<b>V</b>	V	<b>√</b>	<b>V</b>	V	
10	TRM-1 000EL N	<b>V</b>	√	V	V		<b>V</b>			<b>V</b>	<b>V</b>	<b>V</b>			<b>V</b>								<b>V</b>	<b>V</b>	<b>V</b>	<b>√</b>	<b>V</b>		
11	TRM-1 000EL N K	<b>V</b>	<b>V</b>	V	V		<b>V</b>			V	<b>V</b>	<b>V</b>			<b>V</b>			<b>V</b>					<b>V</b>	<b>V</b>	<b>V</b>	<b>V</b>	<b>√</b>		
12	TRM-1 000EL W	<b>V</b>	<b>√</b>	V	V		<b>V</b>			V	<b>V</b>	<b>V</b>				<b>√</b>				√			<b>V</b>	<b>√</b>	V	<b>√</b>	√		
13	TRM-1 000M L	<b>V</b>	<b>V</b>	V	V		<b>V</b>		<b>V</b>				<b>V</b>							√		Optional	<b>V</b>	<b>V</b>	<b>V</b>	<b>√</b>	<b>V</b>	V	
14	TRM-1 000M L N	<b>V</b>	<b>V</b>	V	V		<b>V</b>		<b>V</b>				V		<b>V</b>								<b>V</b>	<b>V</b>	<b>V</b>	<b>V</b>	<b>√</b>		
15	TRM-1 000EM L	<b>V</b>	<b>V</b>	٧	V		<b>V</b>			<b>V</b>			V							<b>V</b>			<b>V</b>	<b>V</b>	<b>V</b>	V	√		
16	TRM-1 000EM L N	<b>V</b>	√	V	<b>V</b>		<b>V</b>			<b>√</b>			V		<b>V</b>								<b>V</b>	<b>V</b>	√	<b>√</b>	<b>V</b>		
17	TRM-1 000M L K	<b>V</b>	V	V	V		<b>V</b>		<b>V</b>				V					V		<b>V</b>			<b>V</b>	<b>V</b>	√	V	<b>√</b>		
18	TRM-1 000M L W	٧	<b>V</b>	٧	V		<b>V</b>		٧				V			V				<b>V</b>			<b>V</b>	<b>V</b>	√	<b>√</b>	<b>V</b>		
19	TRM-1 000M L -Fan	<b>V</b>	<b>V</b>	<b>V</b>	<b>V</b>			<b>V</b>	<b>V</b>		<b>V</b>	<b>V</b>								<b>V</b>		Optional	<b>V</b>	<b>√</b>	<b>V</b>	<b>√</b>	<b>V</b>		
20	TRM-1 000DL	<b>V</b>	<b>V</b>		V									<b>V</b>						<b>V</b>		Optional	<b>V</b>	<b>V</b>	V	<b>V</b>	V		
21	TRM-1 000DL N	<b>V</b>	<b>V</b>		V									<b>V</b>	<b>V</b>								<b>V</b>	<b>V</b>	V	<b>V</b>	√		
22	TRM-1 000DX1	<b>V</b>		٧			<b>V</b>		1 Stage												<b>V</b>		<b>V</b>	<b>V</b>	<b>V</b>	٧	<b>V</b>		
23	TRM-1 000DX2		<b>V</b>	٧		<b>V</b>			2Stage												<b>V</b>		<b>V</b>	<b>V</b>	√	<b>V</b>	<b>V</b>		
24	TRM-1 000DX3	٧		٧			٧		2Stage						<b>V</b>								√	<b>V</b>	<b>√</b>	٧	<b>V</b>		
25	TRM-1 000DX4	<b>V</b>		٧		<b>V</b>			2Stage						٧								<b>V</b>	<b>√</b>	<b>V</b>	٧	<b>V</b>		
26	TRM-1 000DX5		√	٧		<b>V</b>			2Stage						<b>V</b>								<b>V</b>	<b>V</b>	√	<b>V</b>	<b>V</b>		
27	TRM-1 000DX6		√	٧			<b>V</b>		2Stage						<b>V</b>								<b>V</b>	<b>V</b>	<b>√</b>	V	V		
28	TRM-1 000DX1 W	<b>V</b>		V			√		1 Stage												√.		<b>V</b>	<b>V</b>	V	V	V		

#### TRM-2000 Fan Coil Thermostat

#### Product Features:








02 Simple Operation Interface.





03 Luxury Piano Brushed Top.


#### Wiring Diagram:

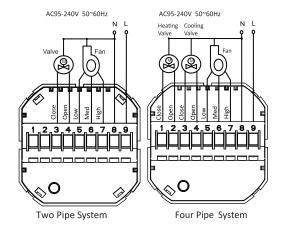

#### Installation Steps:

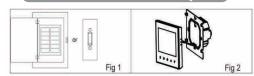

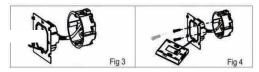

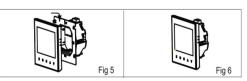

1. After correctly connecting the power suply and equipment cables to the terminals of the power supply box, use a screwdriver to pass the screws through the mounting steel plate and fix them on the cassette.

- 2. After the power box is fixed, connect the cable to the operation panel.
- 3. Put the operation panel against the installation steel plate and slide it down.
- 4. Installation is completed.



# Enjoy Smart Life Easly

Matte Silver Border. Flush Mount Design.

Clearly Visible Thinness That Blends Into a Variety Of Home Styles

Support ODM/OEM Function Customization.



















# TRM-2000 Fan Coil Thermostat series selection table

		Power	Supply	Cor	itrol		Fan				App	olication						-	Additional					C	olor		Butto	n light
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 OV	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve	0-1 0V Damper	Modbus	WIFI	Zigbee	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Pink	Brushed SS	One	Four
1	TRM-2000 AL	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	√										Optional	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	
2	TRM-2000 AL N	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	√			<b>√</b>								<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		
3	TRM-2000 AL K	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		√	√						<b>√</b>		<b>√</b>		Optional	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		
4	TRM-2000AL N K	√	√	<b>√</b>	<b>√</b>		√		<b>√</b>		√	√			<b>√</b>			<b>√</b>					<b>√</b>	<b>√</b>	<b>√</b>	√		
5	TRM-2000AL W	√	√	√	√		√		<b>√</b>		√	√				<b>√</b>				√			<b>√</b>	√	<b>√</b>	√		
6	TRM-2000AL ZB	√	√	1	√		√		<b>√</b>		√	√					√			√			<b>√</b>	√	<b>√</b>	√		
7	TRM-2000EL	√	√	√	√		√			√	√	√								√		Optional					√	
8	TRM-2000EL N	√	√	1	√		√			√	√	√			√								<b>√</b>	√	<b>√</b>	√		
9	TRM-2000EL W	√	√	√	√		√			√	√	√				<b>√</b>				√			<b>√</b>	√	<b>√</b>	√		
10	TRM-2000EL ZB	√	√	√	√		√			√	√	√					√			√			<b>√</b>	√	<b>√</b>	√		
11	TRM-2000M L	√	√	1	√		√		√				√							√		Optional	<b>√</b>	√	<b>√</b>	√	√	
12	TRM-2000M L N	√	√	1	<b>√</b>		√		√				√		<b>√</b>								<b>√</b>	√	1	√		
13	TRM-2000M L K	√	√	1	1		√		<b>√</b>				√					1		√			√	<b>√</b>	1	√		
14	TRM-2000M L NK	1	√	1	1		√		√				√		<b>√</b>			√					<b>√</b>	√	1	√		

#### TRM-3000 Fan Coil Thermostat

#### Product Features:








**02**Adjustable Blacklight Brightness.





03
Push-Up Convenient
Installation.

#### Wiring Diagram:

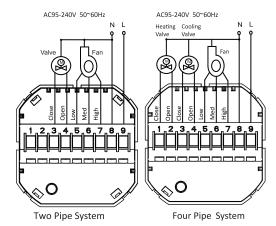

#### Installation Steps:

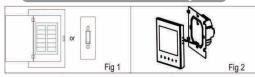

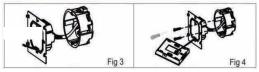

- 1. After correctly connecting the power suply and equipment cables to the terminals of the power supply box, use a screwdriver to pass the screws through the mounting steel plate and fix them on the cassette.
- 2. After the power box is fixed, connect the cable to the operation panel.
- 3. Put the operation panel against the installation steel plate and slide it down.
- 4. Installation is completed.



#### Meet the best you

White Silver


#### White, Black, Piano Brushed Three Appearances.

Other colors can be customized

White, Blue, Orange Three-Color Negative Display Large Screen. High-End Color Matching Is Suitable For Hotel, Indoor, Office And Other Scenes.

Clearly Visible Thinness That Blends Into a variety Of Home Styles. Support ODM/OEM Advanced Function Customization.



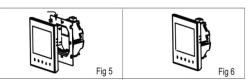



Fan Coil Thermostat series selection table

		Power	Supply	Cor	itrol		Fan				Ар	plication							Additional					C	olor		Butto	n light
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve	0-1 0V Damper	Modbus	WIFI	Zigbee	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Pink	Brushed SS	One	Four
1	TRM-3000 AL	<b>√</b>	<b>√</b>	√	<b>√</b>		<b>√</b>		<b>√</b>		√	√										Optional	<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>	
2	TRM-3000 AL N	<b>√</b>	√	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		√	√			<b>√</b>								<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		
3	TRM-3000 AL K	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		√	√						√		<b>√</b>		Optional	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		
4	TRM-3000AL W	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		√	<b>√</b>				<b>√</b>				√			<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		
5	TRM-3000AL ZB	<b>√</b>	<b>√</b>	√	<b>√</b>		√		√		√	<b>√</b>					<b>√</b>			<b>√</b>			<b>√</b>	√	<b>√</b>	√		
6	TRM-3000EL	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>			√	√	√								<b>√</b>		Optional					<b>√</b>	
7	TRM-3000EL N	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>			<b>√</b>	√	√			<b>√</b>								<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		
8	TRM-3000EL W	<b>√</b>	√	√	<b>√</b>		√			√	√	√				<b>√</b>				√			<b>√</b>	√	<b>√</b>	√		
9	TRM-3000EL ZB	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		√			√	√	<b>√</b>					<b>√</b>			√			<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		
10	TRM-3000M L	1	1	√	<b>√</b>		1		<b>√</b>				√							1		Optional	√	√	<b>√</b>	<b>√</b>	√	

#### TRM-6000 Fan Coil Thermostat

# Product Features:



01 51mm Large Negative Screen.




**02**Adjustable Blacklight Brightness.



03 Silver Matte Border High-End Sense.


#### Wiring Diagram:

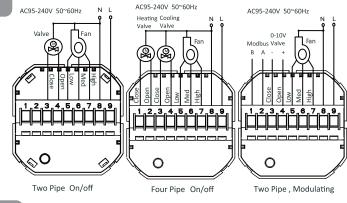

#### **Installation Steps:**





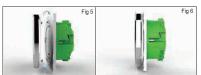

- 1. Turn off the main power supply.
- 2. After connecting the power supply and equipment cables to the terminals of the power supply box correctly, use a screwdriver to the screws are fixed to the cassette through the mounting steel plate.
- 3. After the power box is fixed, connect the cable to the operation panel.
- 4. Fix the installation panel with the 60mm European-Style Cassette with screws, and embed them into the wall.
- 5. Hold the operation panel against the mounting steel plate and slide it down.
- 6. The installation is completed.



#### His Wisdom Is Extraordinary

#### Simple. High Sense

Circular Curve Design.
Ring Function Key Layout.
Rotary Round Square Mounting Plate.
Support ODM/OEM Advanced Function Customization.







TRM-6000 Fan Coil Thermostat series selection table

		Power	Supply	Con	trol		Fan				Арі	plication							Additional						Colo	or	
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 OV	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve	0-1 0V Damper	Modbus	WIFI	Zigbee	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Pink	Brushed SS	Gold
1	TRM-6000 AL	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	<b>√</b>								<b>√</b>		Optional	<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>
2	TRM-6000 AL N	<b>√</b>	√	<b>√</b>	√		<b>√</b>		√		<b>√</b>	<b>√</b>			-√								<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>
3	TRM-6000 AL K	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	<b>√</b>						√		<b>√</b>		Optional	<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>
4	TRM-6000AL N K	-√	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	-√			√			√					<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>
5	TRM-6000AL W	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	<b>√</b>				<b>√</b>				-√			<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>
6	TRM-6000AL ZB	-√	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	-√					<b>√</b>			<b>√</b>			<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>
7	TRM-6000AL NW	-√	√	√	√		√		<b>√</b>		-√	-√			√	<b>√</b>				-√			<b>√</b>	✓	<b>√</b>	√	<b>√</b>
8	TRM-6000EL	√	√	√	√		√			<b>√</b>	<b>√</b>	<b>√</b>								<b>√</b>		Optional	<b>√</b>	<b>√</b>	<b>√</b>	√	<b>√</b>
9	TRM-6000EL N	√	√	√	√		√			✓	√	-√			√								1	✓	1	√	<b>√</b>
10	TRM-6000EL W	√	√	√	1		√			√	√	<b>√</b>				<b>√</b>				<b>√</b>			1	√	1	√	<b>√</b>
11	TRM-6000EL ZB	√	√	√	√		√			√	√	<b>√</b>					√			<b>√</b>			1	√	1	√	<b>√</b>
12	TRM-6000EL NW	√	√	√	√		√			√	√	√			√	<b>√</b>				<b>√</b>			-√	√	1	√	<b>√</b>
13	TRM-6000M L	√	√	√	1		√		√				√							<b>√</b>		Optional	1	√	1	√	<b>√</b>
14	TRM-6000M L N	√	√	√	1		√		√				√		✓								1	✓	1	-√	<b>√</b>
15	TRM-6000M L K	√	√	√	√		√		√				√					√		<b>√</b>			√	<b>√</b>	<b>√</b>	√	<b>√</b>
16	TRM-6000M L NK	√	√	√	√		√		√				√		✓			√					√	<b>√</b>	1	✓	<b>√</b>
17	TRM-6000M L -Fan	<b>√</b>	√	<b>√</b>	<b>√</b>			<b>√</b>	<b>√</b>				<b>√</b>			合	(Ctrl)			√			<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>

#### TRM-6001 Fan Coil Thermostat

# Product Features:









01 Black + White.


02 7+1 Dynamic Lighting Modes.

03 Round/Square Mounting Plate.

#### Wiring Diagram:

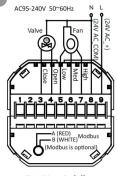


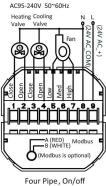

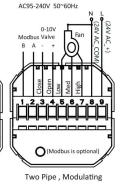

Two Pipe, On/off

## **Installation Steps:**

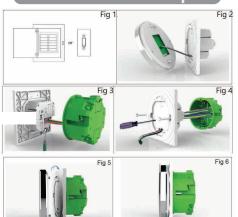

- 1. Keep power off
- 2. Remove the mounting plate.
- 3. Connect the power supply and load it into the appopriate terminals "See FIG3".
- 4. Securely fix the mounting plate to the wall with screws.
- 5. Fasten body of thermostat and the mounting plate through rotating "See FIG5".
- 6. Installation is completed.



#### Exclusive to your temperature-controlled butler

Bring you a professional, safe and efficient indoor temperature control experience







Fan Coil Thermostat series Selection table

		Power Supply C			itrol	Fan			Application							Additional								r
No	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve	0-1 0V Damper	Modbus	WIFI	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Other
1	TRM-6001 A	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		√	√							√		Optional	<b>√</b>	<b>√</b>	Pending
2	TRM-6001AW	-√	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		√	√				<b>√</b>			√			√	<b>√</b>	Pending
3	TRM-6001E	<b>√</b>	√	<b>√</b>	<b>√</b>		<b>√</b>			<b>√</b>	√	<b>√</b>							√		Optional	<b>√</b>	1	Pending
4	TRM-6001EW	<b>√</b>	<b>√</b>	<b>√</b>	√		<b>√</b>			<b>√</b>	<b>√</b>	√				<b>√</b>			√			<b>√</b>	<b>√</b>	Pending

#### TRM-7000 SMART KNOB THERMOSTAT

#### Product Features:







01

3.2-inch Large Negative Screen.

#### 02


Adjustable Blacklight Brightness.

#### 03


Push-Up Convenient Installation.

#### Wiring Diagram:


Please check the information laser printed on the TRMk of the Thermostat for the actual voltage.

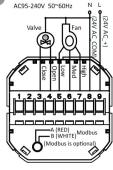



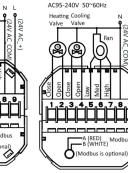

Four Pipe, On/off

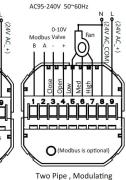


#### ColorFul Stereo Knob With TFT True Color Screen

240\*240 LCD screen, it is "really" very beautiful

The Eight Main Control Options Are Directly Set By Twisting Side Knobs Widely Used In Different Regional Scenes.

#### Installation Steps:

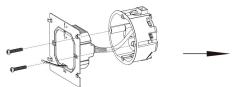

1, Turn off the main power supply before installation, and separate the installation named by sliding the display frame. Connect the line of the back cover of the product ferring to the wiring diagram and the picture above;



4. The installation is complete.

2, use screws to install the panel with 60mm European cartridges Fixed, embedded in the wall;

3. Install the display part back to the installation panel;





Gold SS Brushed SS Black SS





Fan Coil Thermostat series selection table

			Power Supply		Control		Fan			Application						Additional								Color		
N	0	Model	220VAC	24VAC	Heat	Cool	1 Speed	3 Speed	0-1 0V	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve	0-1 0V Damper	Modbus	WIFI	Zigbee	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Other
1	T	RM-7000ALW	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>		<b>√</b>		1		<b>√</b>	<b>√</b>				<b>√</b>				√			<b>√</b>	<b>√</b>	<b>√</b>
2	2 1	TRM-7000ELW	<b>√</b>	<b>√</b>	<b>√</b>	1		<b>√</b>			<b>√</b>	<b>√</b>	√				<b>√</b>				√			<b>√</b>	<b>√</b>	<b>√</b>

# TRM-008 Fan Coil Thermostat

#### Product Features:



Screen Display






01 4.8-inch Multi-Color Large


02 15mm Ultra-Thin Visible Wall Thickness

03 Silver Metal Frame

## Wiring Diagram:

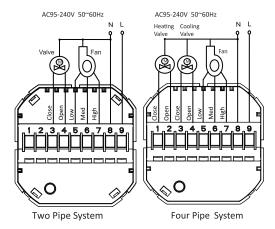

#### Installation Steps:

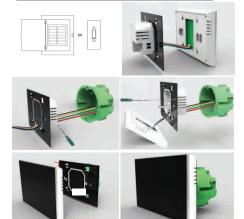

- 1. As shown in fig1, Turn off the main power supply.
- 2. As Shown in fig2, By twisting the frame of the display screen, unscrew the installation panel.
- 3. Refer to the wiring diagram and fig3 and connect the TRMk cover circuit of the product.
- 4. As shown in fig4 fix the installation panel to the 60mm European–Style Cassette with screws, and embed into the wall.
- 5. As shown in fig5 rotate the display part TRMk to the installation panel.
- 6. As shown in fig6 the installation is completed.



#### Smart Aesthetics

#### Warm with heat, Smart and energy-saving

The Center Color-Changing ring is more techological. 6 Touch function keys design.

Wall and flush mount compatible.

7 Days and 4 periods of programming/temporary manual Programming/manual mode/holiday mode free transfer.





Fan Coil Thermostat series Selection table

		Control		Fan			Application							Additional								Color				
No	Model	Heat	Cool	1 Speed	3 Speed	0-1 OV	2-pipe	4-pipe	2 wired Motorized Valve	3 wired Motorized Valve	0-1 0V Motorized Valve	0-1 0V Damper	Modbus	WIFI	Keycard	Window	Programm able	External Sensor	Battery	White	Black	Brushed SS	Other			
1	TRM-8000 AL	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	<b>√</b>							<b>√</b>		<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>			
2	TRM-8000AL W	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>		<b>√</b>	√				<b>√</b>			<b>√</b>			<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>			
3	TRM-8000EL	<b>√</b>	<b>√</b>		<b>√</b>			<b>√</b>	√	√							<b>√</b>		<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>			
4	TRM-8000ELW	<b>√</b>	<b>√</b>		<b>√</b>			<b>√</b>	√	√				<b>√</b>			<b>√</b>			<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>			
5	TRM-8000M L	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>				√						<b>√</b>		<b>√</b>	<b>√</b>	<b>√</b>	-√	✓			
6	TRM-8000M L W	<b>√</b>	<b>√</b>		<b>√</b>		<b>√</b>				<b>√</b>			<b>√</b>			<b>√</b>			<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>			